

Title:	How to Call Indoor Station by Door Station	Version:	v1.0	Date:	3/8/2017
Product:	Video Intercom Device	Page:	1 of 3		



Preparation

1. An indoor stations and a villa door station or a door station (DS-KH8301-WT & DS-KH8300 & DS-KV8102-IM in this document);
2. Client software iVMS-4200 (V2.6.0.55 bulid20170223 in this document).

Note:

1. The firmware version of all devices needs to be same (V1.4.70 in this document).
2. This document only use a simple video intercom system to demonstrate the function, which only contains indoor station and villa door station, doesn't include master station.

Step 1: Add Devices to iVMS-4200

Click **Add to Client** tab to add all devices (a indoor station and a villa door station) to iVMS-4200, make sure all devices are in the same local network, if not, click **Modify Netinfo** to modify it.

IP	Device Type	Firmware Version	Security	Server Port	Device Serial ...	Start Time	Added
10.5.8.171	DS-KM8301	V1.4.11build 161226	Active	8000	DS-KM830101...	2017-03-02 20:11:56	No
10.5.8.150	DS-KH8301-WT	V1.4.0build 160831	Active	8000	DS-KH8301-W...	2015-01-20 20:54:16	Yes
10.5.8.153	DS-KH8300-T	V1.4.70build 170222	Active	8000	DS-KH8300-T...	2017-02-28 14:09:00	Yes

Step 2: Set Indoor Station

Choose the indoor station, click **Remote Configuration**, Then go to **Intercom > ID Configuration**, set **Device Type** as **Indoor Station**, put in a room number(range from 1-9999), and click **Save**.

Device for Management (11)

Device Type	Nickname	Connectio...	Network Paramet...	Device Serial No.	Security	Net Status
Indoor Sta...	10.5.8.153	TCP/IP	10.5.8.153:8000	DS-KH8300-T0120150727WR533033790CLU	Strong	
Indoor Sta...	10.5.8.150	TCP/IP	10.5.8.150:8000	DS-KH8301-WT0120150712WR530330919CLU	Strong	

Remote Configuration

Configuring the Room Numbers

Device No. Configuration


Device Type:

Room No.:

Title:	How to Call Indoor Station by Door Station	Version:	v1.0	Date:	3/8/2017
Product:	Video Intercom Device	Page:	2 of 3		



Then go to **Network > Linked Network Configuration**, input **(Main) Door Station IP Address** as the villa doors station's IP address, and choose **Main Door Station type** as **Main Door Station(V Series)**, **Connect Mode** as **Same Network**, click **Save**.

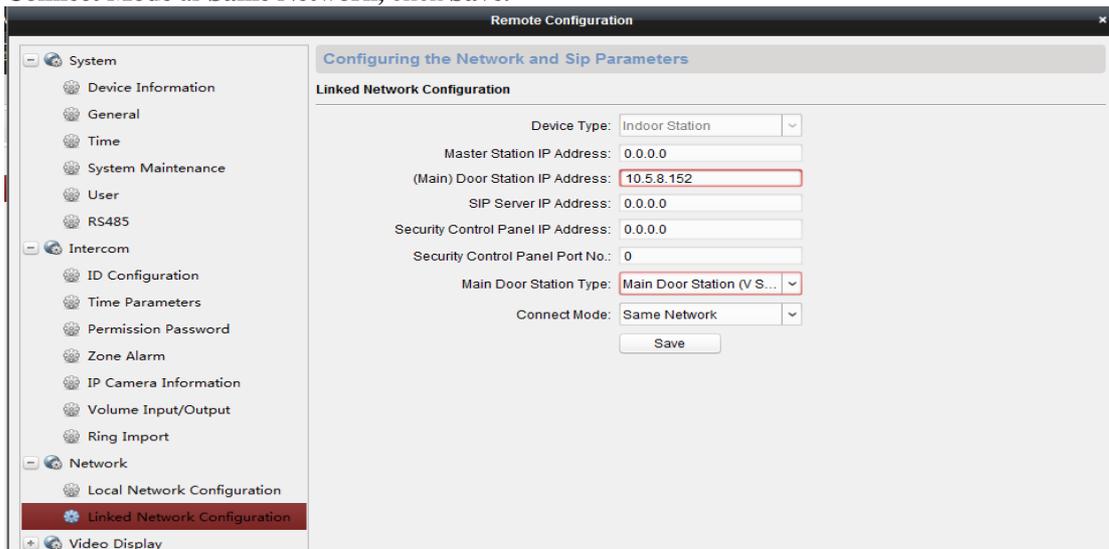

Step 3: Make a Call Using Villa Door Station

Click call button on villa door station, then the indoor station can receive call immediately.



Title:	How to Call Indoor Station by Door Station	Version:	v1.0	Date:	3/8/2017
Product:	Video Intercom Device	Page:	3 of 3		



First Choice for Security Professionals
***HIK*VISION Technical Support**