

Title:	How to Set Villa Door Station to Call iVMS or Master Station	Version:	v1.0	Date:	16/08/2018
Product:	Video Intercom	Page:	1 of 7		

How to Set Villa Door Station to Call iVMS or Master Station


Instructions

1. This guide is based on the V1.5.0 firmware. It takes DS-KV8102-V and DS-KM8301 as examples to introduce how to Set Villa Door Station to Call iVMS or Master Station.
2. For video intercom devices, you are required to create the password to activate them before they can be added to the software and work properly.

Steps:


1. Add Devices

- 1) **Add Villa Door Station** to iVMS4200 software (Please ensure device and PC in same network first).

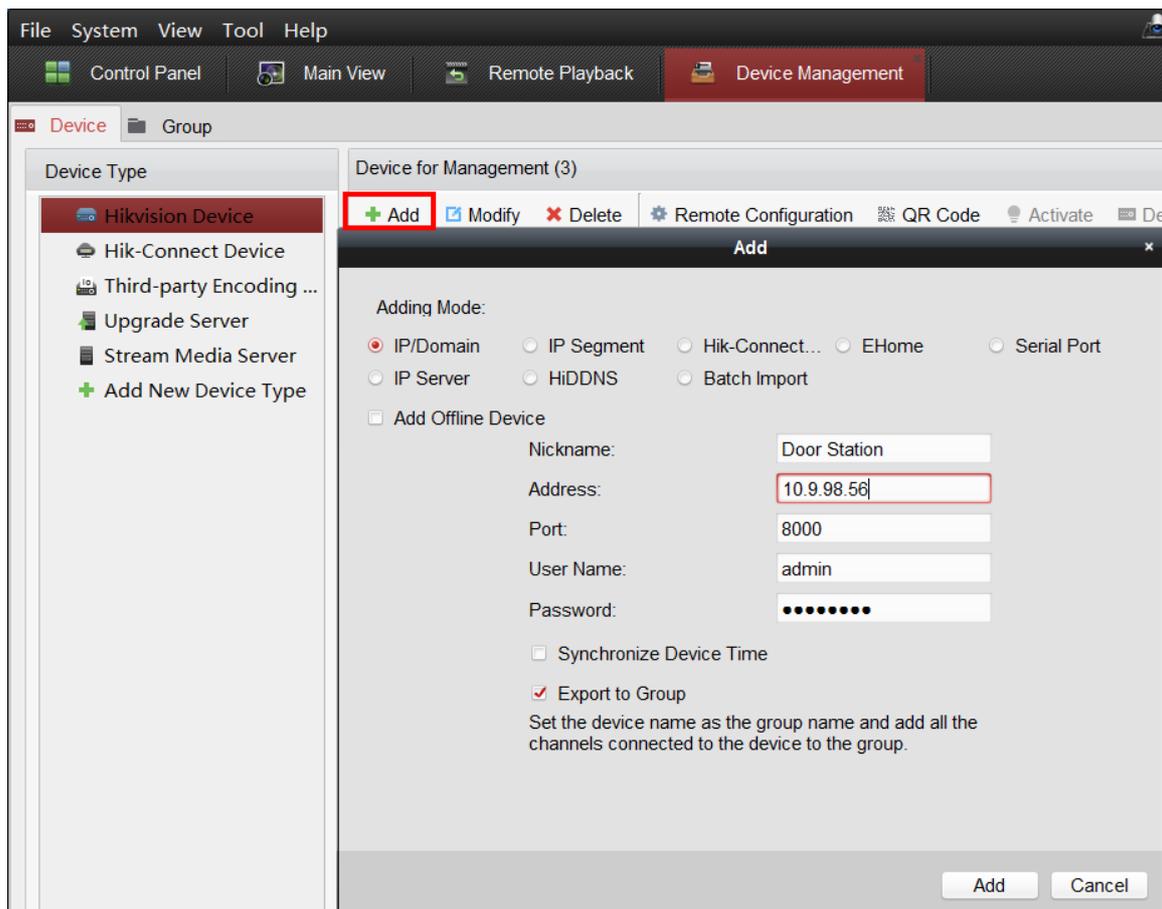

- 2) **Add Master Station** to iVMS4200 software (Please ensure device and PC in same network first).


Title:	How to Set Villa Door Station to Call iVMS or Master Station	Version:	v1.0	Date:	16/08/2018
Product:	Video Intercom	Page:	2 of 7		

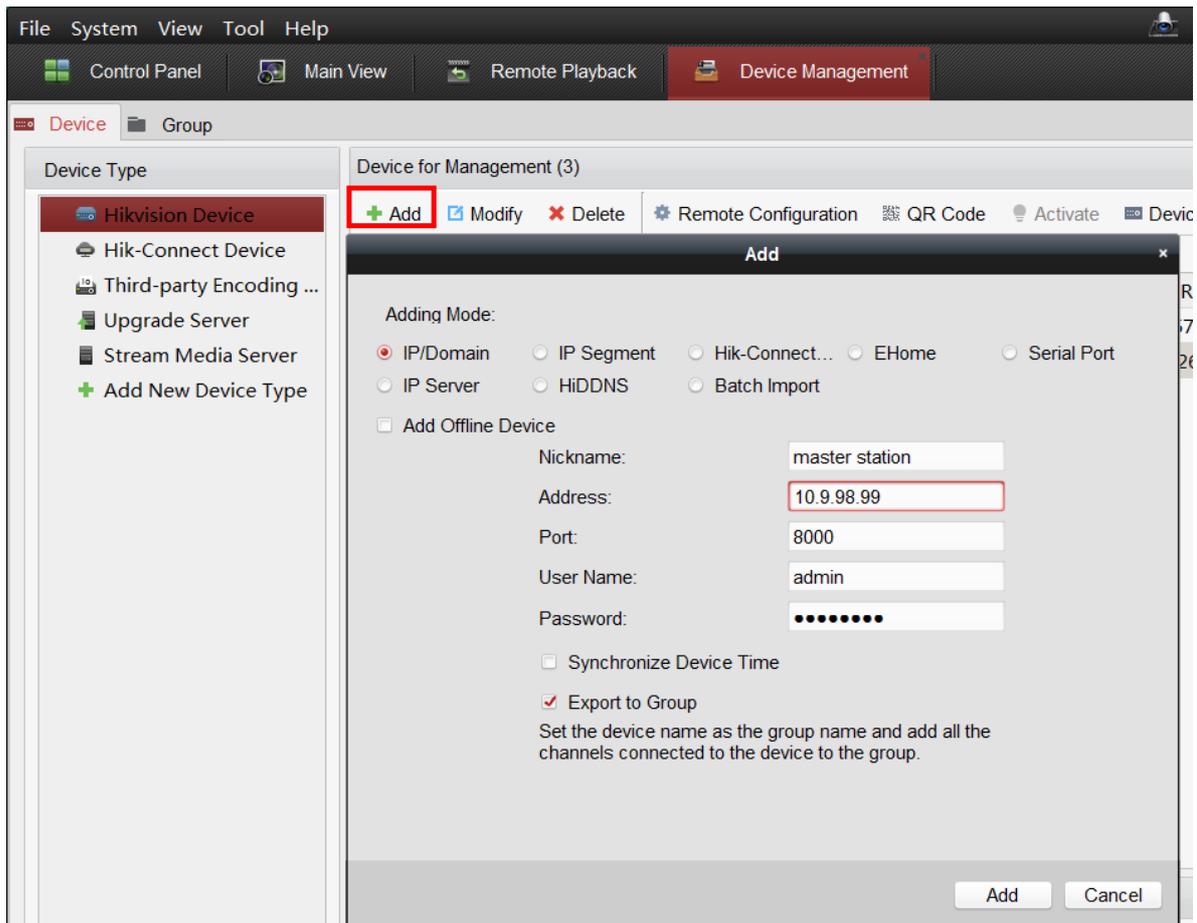


2. Call iVMS-4200

- 1) Keep default settings of Linked Network Configuration.

Title:	How to Set Villa Door Station to Call iVMS or Master Station	Version:	v1.0	Date:	16/08/2018
Product:	Video Intercom	Page:	3 of 7		

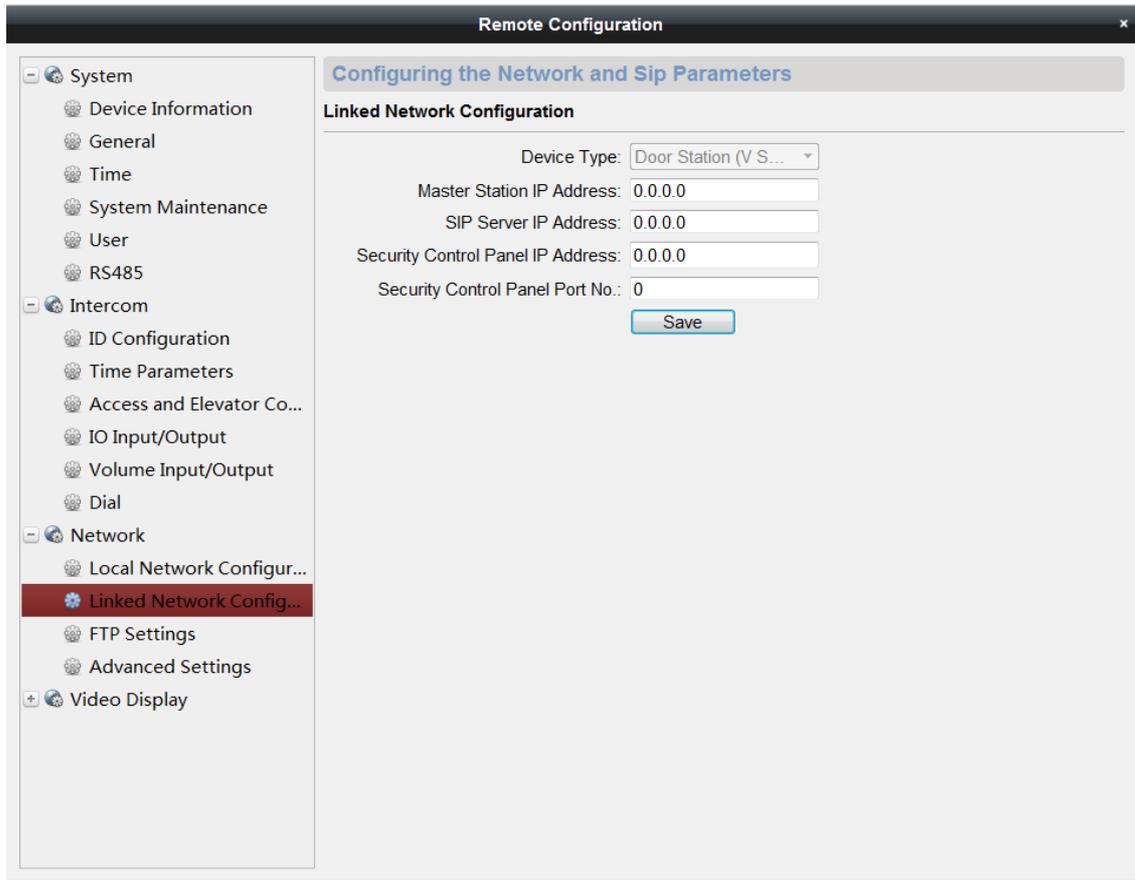


2) Long press Calling button on Villa Station. Software will receive Call from device, Click **Answer**. (quick press would call indoor station by default).

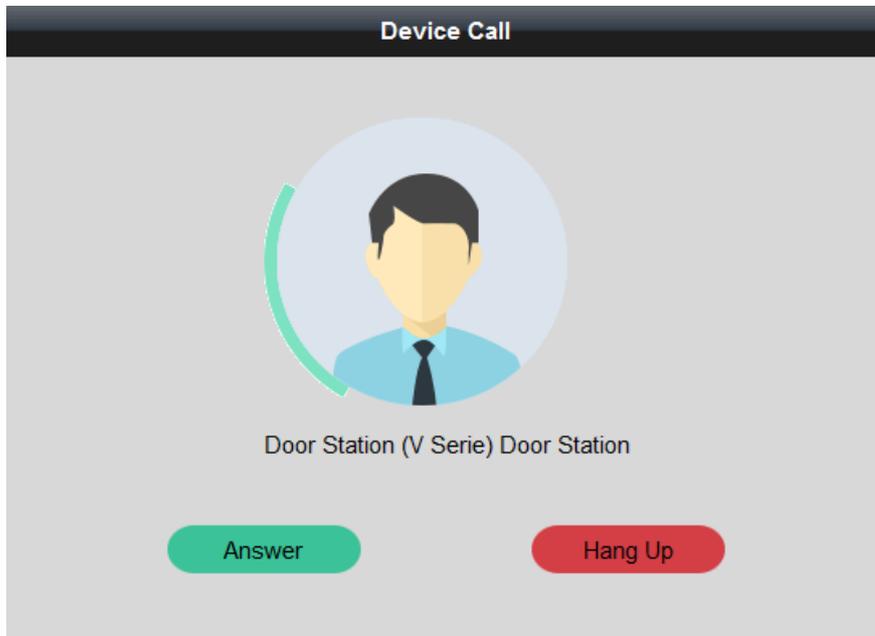


3) In Call.

Title:	How to Set Villa Door Station to Call iVMS or Master Station	Version:	v1.0	Date:	16/08/2018
Product:	Video Intercom	Page:	4 of 7		

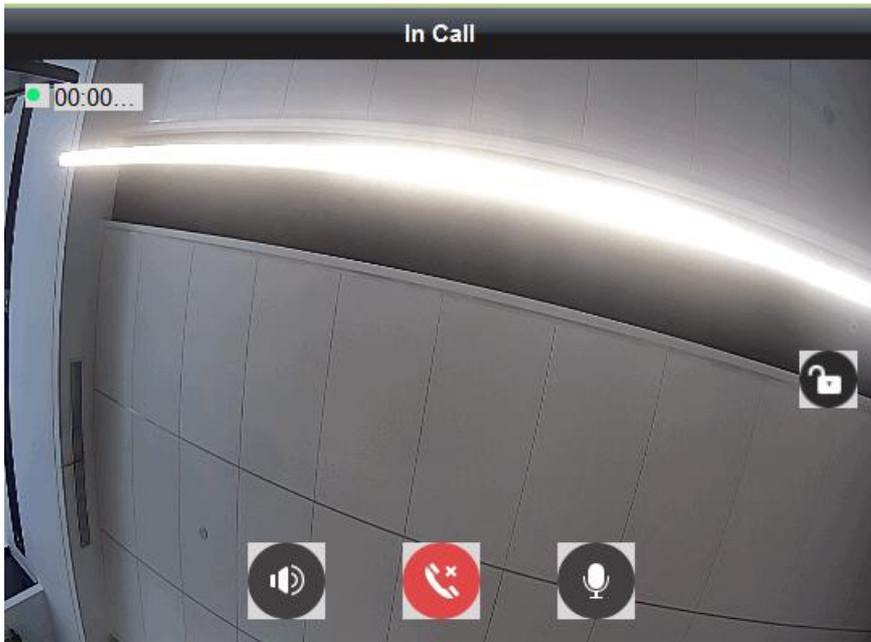

Notes:


Quick Press for Calling Center would take effect If enable Quick Press for Calling Center.

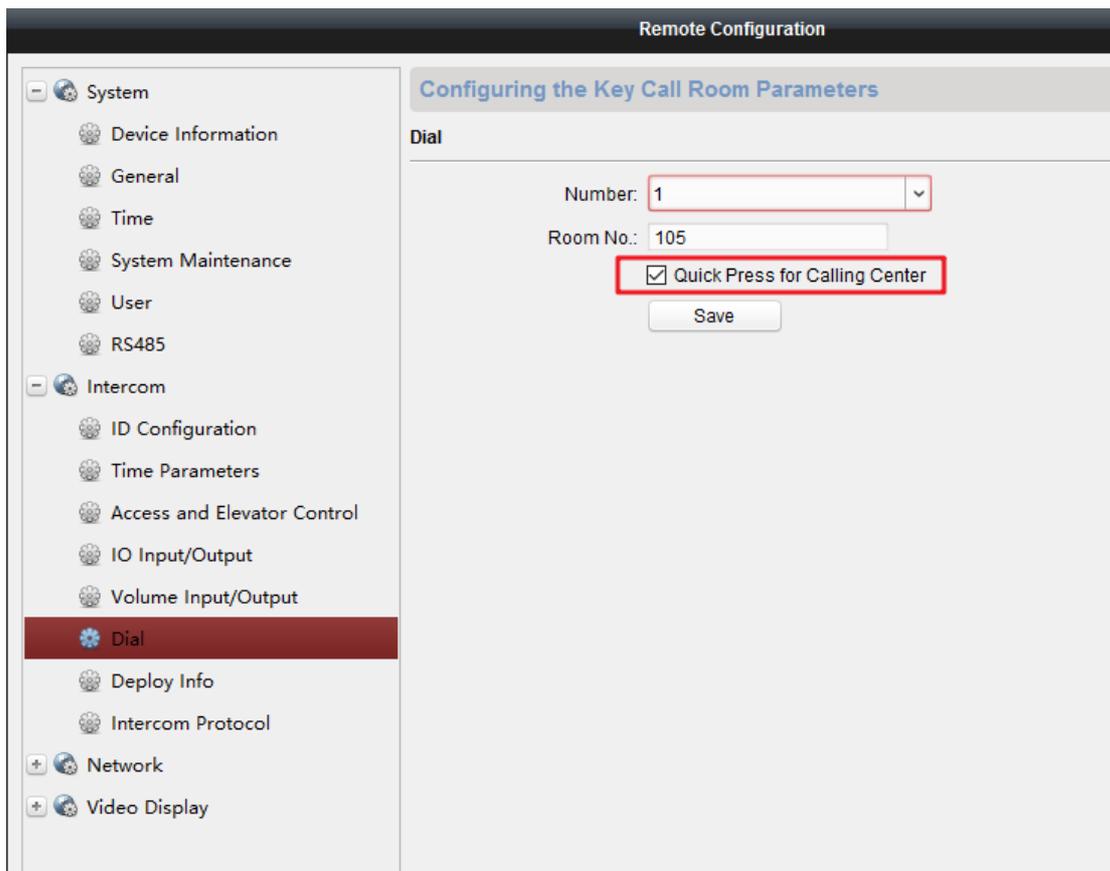

3. Call Master Station


Title:	How to Set Villa Door Station to Call iVMS or Master Station	Version:	v1.0	Date:	16/08/2018
Product:	Video Intercom	Page:	5 of 7		

- 1) Go to Remote Configuration of Door Station. **Network>Linked Network Configuration**. Set Master Station IP Address and SIP Server IP address as 10.9.98.99 and Click **Save**.

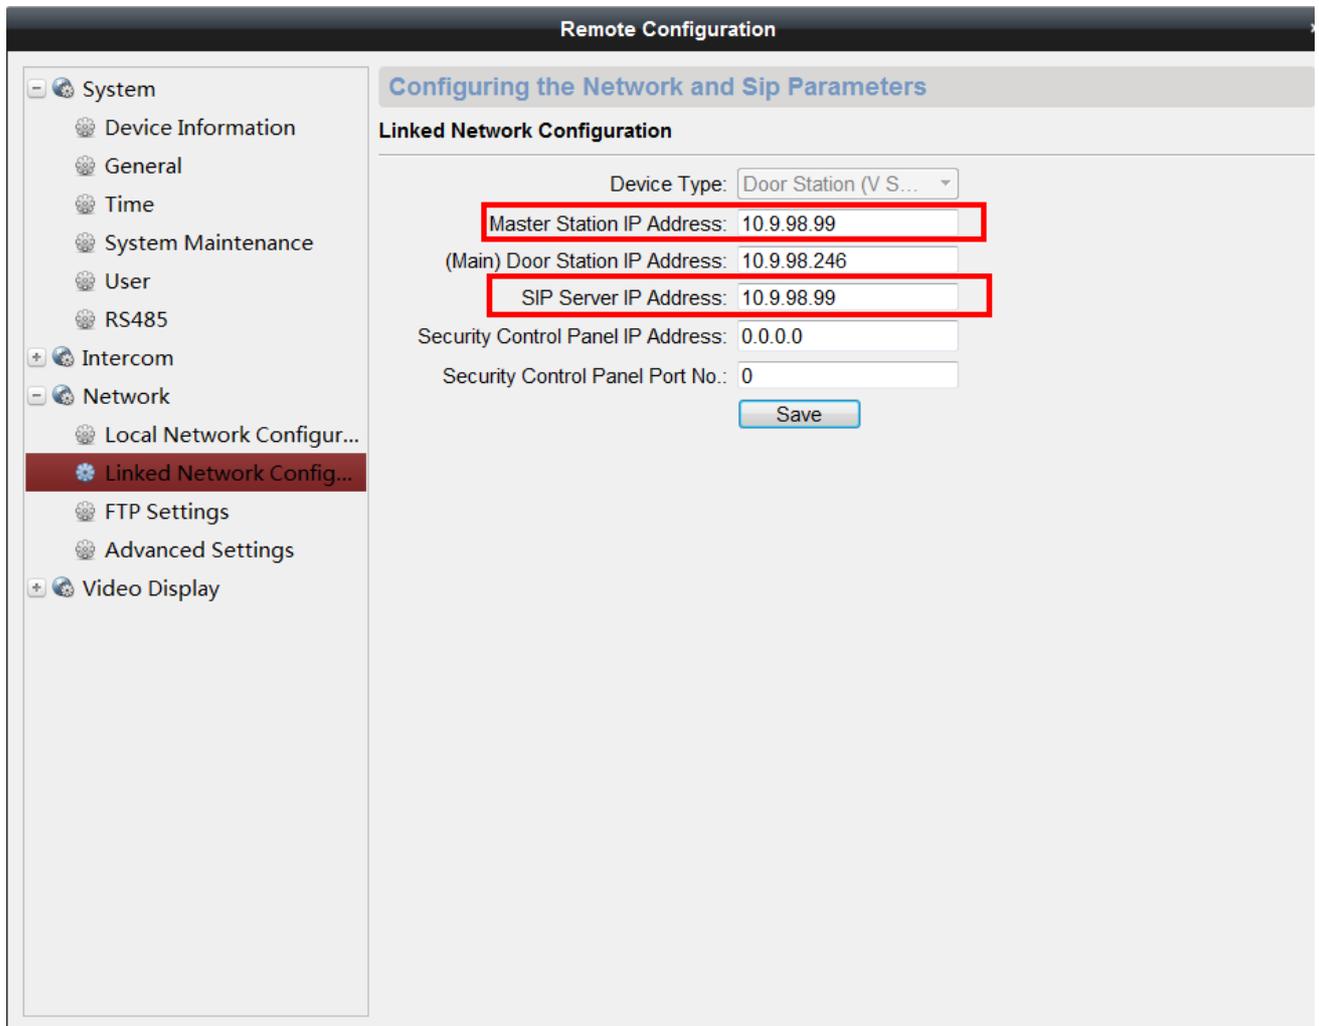

- 2) Go to Remote Configuration of Master Station. **Network>Linked Network Configuration**. Set SIP Server IP address as 10.9.98.99 and Click **Save**.

Title:	How to Set Villa Door Station to Call iVMS or Master Station	Version:	v1.0	Date:	16/08/2018
Product:	Video Intercom	Page:	6 of 7		

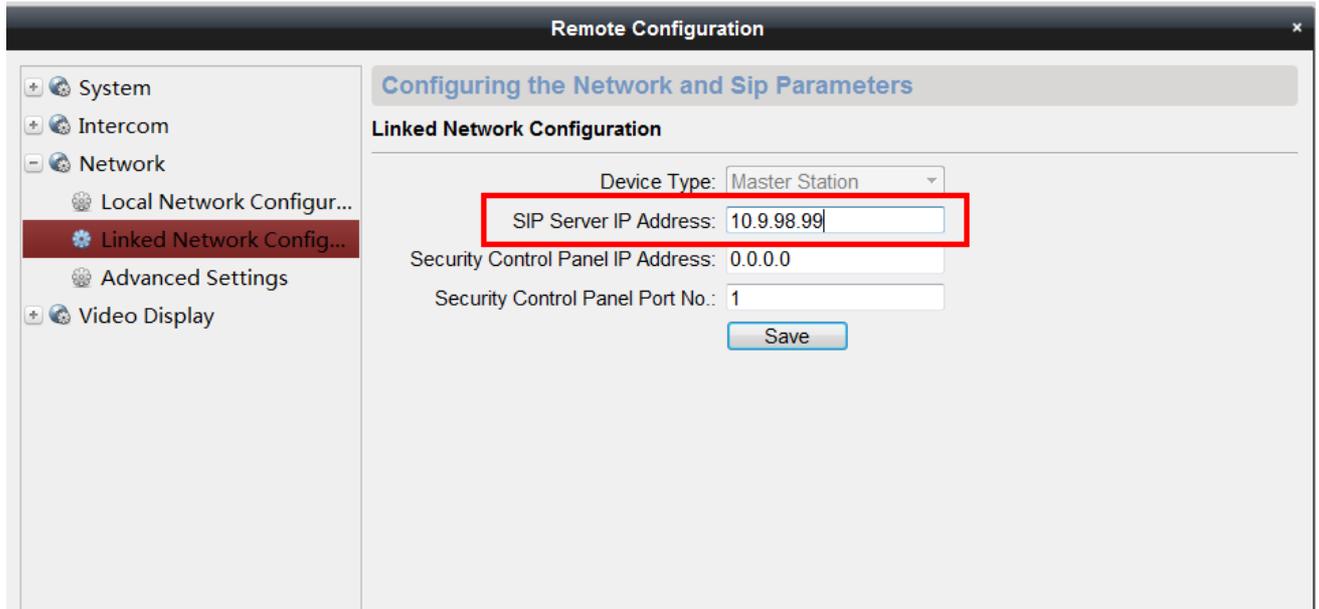

3) Long press Calling button on Villa Station. Master Station will receive Call from device.

Title:	How to Set Villa Door Station to Call iVMS or Master Station	Version:	v1.0	Date:	16/08/2018
Product:	Video Intercom	Page:	7 of 7		



First Choice for Security Professionals
***HIK*VISION Technical Support**