

<b>Title:</b>	How to Set a Public Password for Unlocking Door Stations	<b>Version:</b>	v1.0	<b>Date:</b>	8/21/2018
<b>Product:</b>	Indoor Station, Doorbell			<b>Page:</b>	1 of 3


## Preparation

---

1. Please upgrade the firmware of indoor station to V1.5 in advance.
2. Using password to unlock Door Stations is only available for KD series door station.
3. Public password should be set as a format of 6 digits.
4. Up to 3 public passwords could be used.


## How to Set a Public Password for Unlocking Door Stations

1. After adding the device, please go to **remote configuration** as the following picture to set the password.

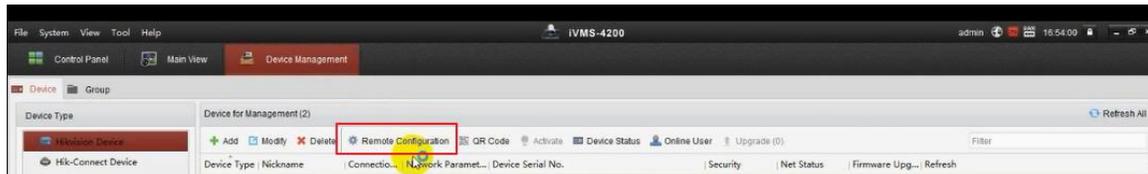


2. Enter **Intercom—Permission Password** interface, **admin password** (also called configuration password), **public password**, and **card activation password** could be chosen to set.

<b>Title:</b>	How to Set a Public Password for Unlocking Door Stations	<b>Version:</b>	v1.0	<b>Date:</b>	8/21/2018
<b>Product:</b>	Indoor Station, Doorbell			<b>Page:</b>	2 of 3

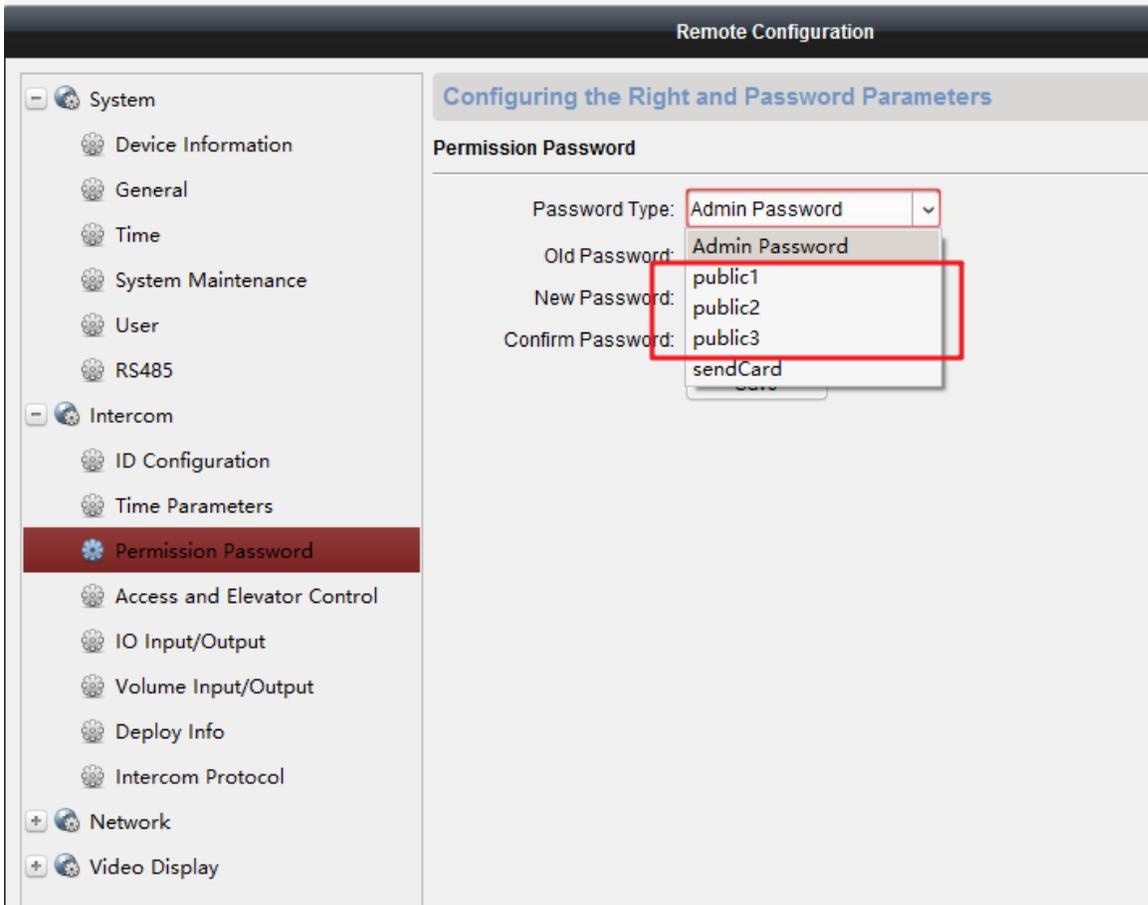

3. On door station panel, please enter **#public password#** to unlock the door.  
For example, if the password is 098765, please input #098765# to unlock the door.

<b>Title:</b>	How to Set a Public Password for Unlocking Door Stations	<b>Version:</b>	v1.0	<b>Date:</b>	8/21/2018
<b>Product:</b>	Indoor Station, Doorbell			<b>Page:</b>	3 of 3

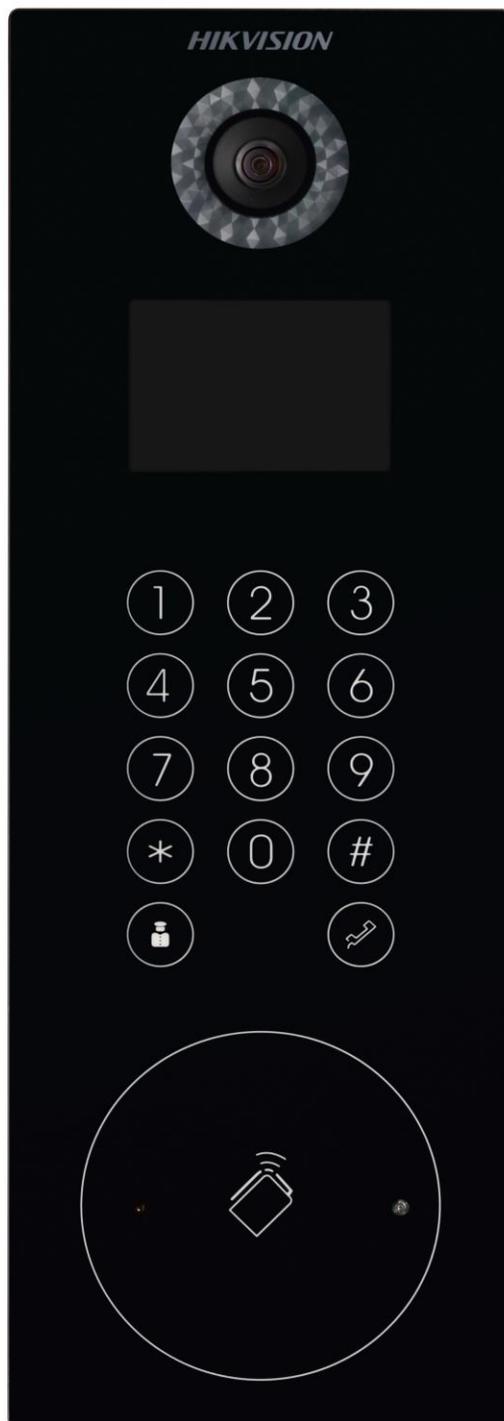



<b>Title:</b>	How to Set a Public Password for Unlocking Door Stations	<b>Version:</b>	v1.0	<b>Date:</b>	8/21/2018
<b>Product:</b>	Indoor Station, Doorbell			<b>Page:</b>	4 of 3

**First Choice for Security Professionals**  
**HIKVISION Technical Support**