

Title:	How to Unlock Door by Password	Version:	v1.0	Date:	3/8/2017
Product:	Video Intercom Device	Page:	1 of 3		

Preparation



1. An indoor station and a door station(DS-KH8301WT & DS-KD8102-V in this document);
2. Client software iVMS-4200 (V2.6.0.55 bulid20170223 in this document).
3. The indoor station and the door station have already added to 4200, the indoor station could receive calling from door station and unlock door.

Note:

The firmware version of all devices needs to be same (V1.4.70 or above).

Steps:

1. Change default password: the default unlocking password is 123456, it cannot be used as door unlocking password, we need to change it first. On indoor station local operation interface, go to **Setting > Password > Unlock**, input old password and set a new password here, then save the setting.(we can also change unolcking password in iVMS-4200, the path is: **Remote Configuration > Intercom > Permission Password > Unlocking Password**)

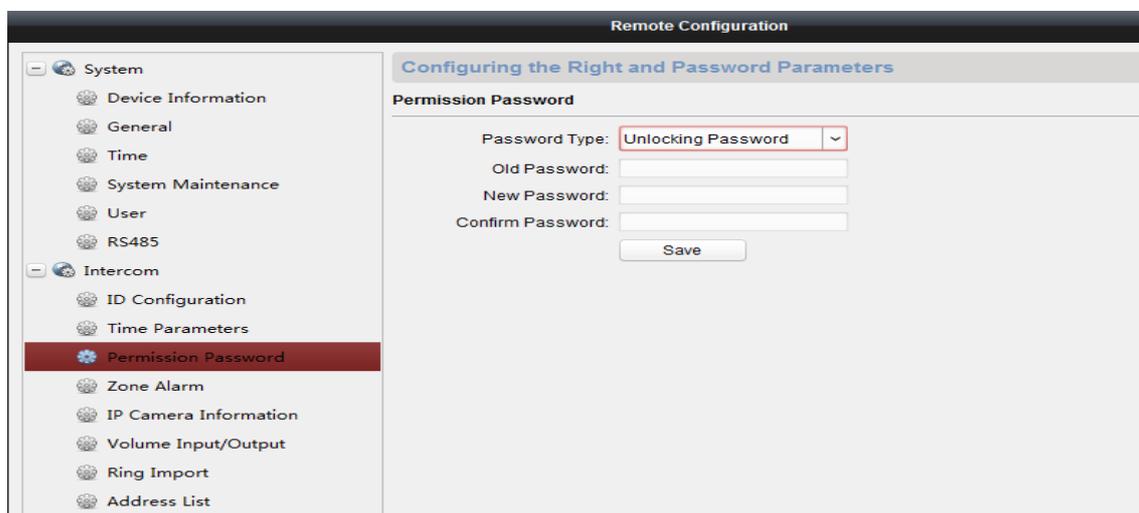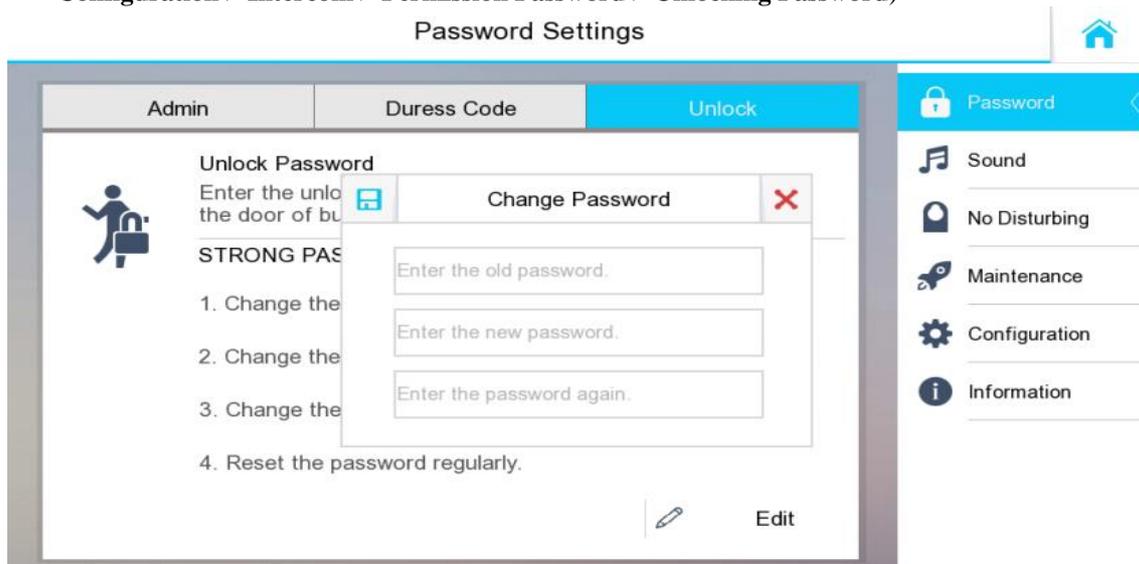

Title:	How to Unlock Door by Password	Version:	v1.0	Date:	3/8/2017
Product:	Video Intercom Device	Page:	2 of 3		

2. On door station panel, input #password# to unlock door. For example, my unlocking password is 654321, then I can input #654321# to unlock door.



Title:	How to Unlock Door by Password	Version:	v1.0	Date:	3/8/2017
Product:	Video Intercom Device	Page:	3 of 3		



First Choice for Security Professionals
***HIK*VISION Technical Support**