

Title:	How to connect card reader to villa door station	Version:	v1.0	Date:	27/11/2017
Product:	Video Intercom	Page:	1 of 4		



How to connect card reader to villa door station

How to Connect Card Reader to Door Station

Preparation

Connecting card reader to villa door station is mainly applied to swiping card to open the door for exiting.

Door station in this document means DS-KV8102-IM and card reader in this

document means DS-K1100M series card readers.


In this document, the door station version is V1.4.71; the iVMS-4200 client version is V2.6.2.50

Note:

1. Please cut off power supply before wiring;


Step 1:

Please set the DIP switch firstly before connecting the card reader, the binary value of the card reader is 1000 0000, please set as the following picture:

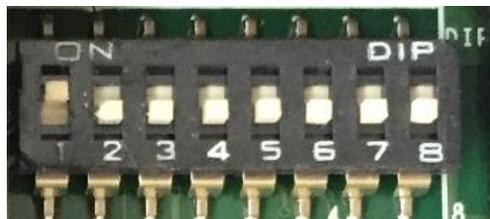


Step 2:

Please connect card reader to villa door station as following picture:

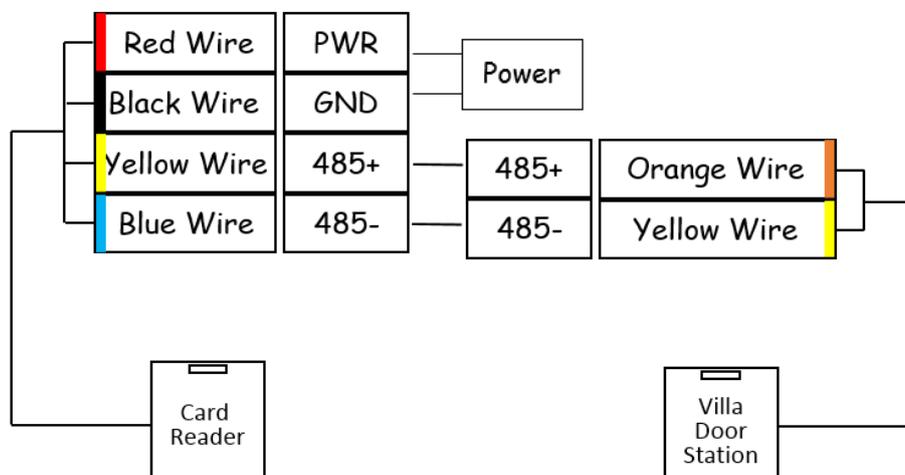


Title:	How to connect card reader to villa door station	Version:	v1.0	Date:	27/11/2017
Product:	Video Intercom	Page:	2 of 4		

HIKVISION

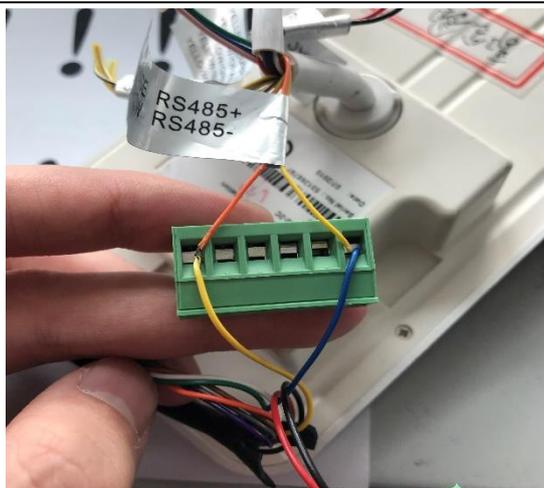


Step 3:

Supply power to door station, and add door station to iVMS-4200 client or Batch Configuration Tool;

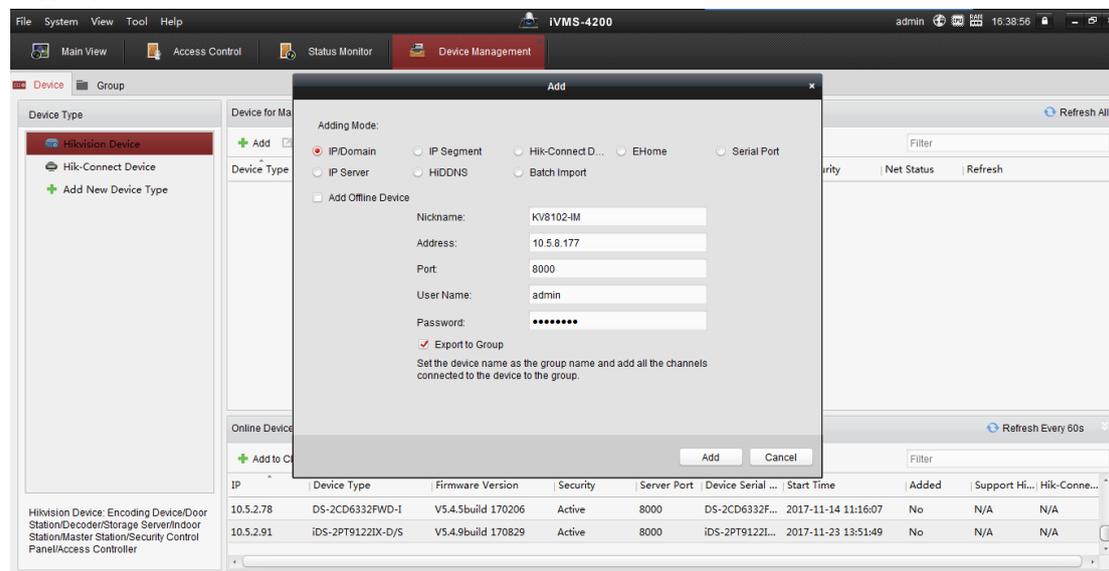

Step 4:

Enter Remote Configuration interface, find System → RS485, configure as picture;

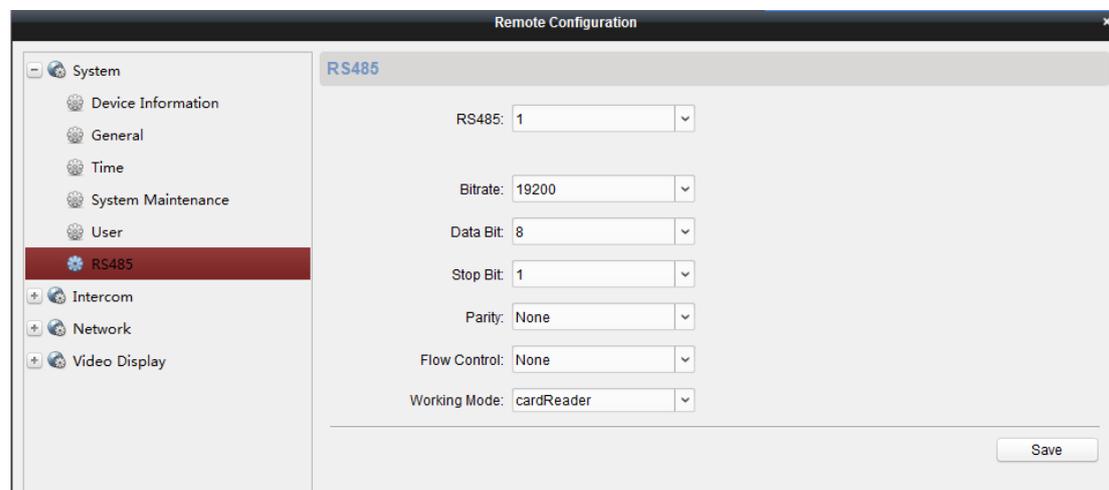

Title:	How to connect card reader to villa door station	Version:	v1.0	Date:	27/11/2017
Product:	Video Intercom	Page:	3 of 4		



Step 5:

Issue card on villa door station or iVMS-4200 client, and test whether card reader works or not;

Title:	How to connect card reader to villa door station	Version:	v1.0	Date:	27/11/2017
Product:	Video Intercom	Page:	4 of 4		



First Choice for Security Professionals

***HIK*VISION Technical Support**